


Personal Protective Equipment (PPE) Required

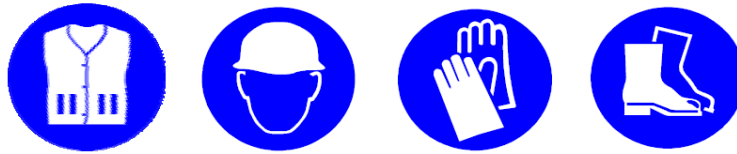

Main Hazards



Responsibility

Pasquill

Are responsible for:

- Providing the Contractor with details of the weight, physical dimensions configuration and layout of timber products.
- Loading trusses to suitable adapted trailer for the safe delivery of trusses.
- Delivering timber products to nearest hard standing surface.
- Using telescopic cutters to release the banding and blue rope following contractors instruction.
- If unloading can not be achieved then abortive deliveries will be chargeable.
- **Pasquill do not offload**

The Contractor

Is responsible for:

- Preparing a safe working method for unloading.
- Informing the truss fabricator of any unusual site requirements.
- **Providing appropriate equipment & manpower for unloading.**
- Providing suitable access for the truss delivery lorry.
- Providing level hard standing ground for unloading.
- Provisions for the safe separation of pedestrians from the unloading process.
- Where crane is used to off-load, the contractor is responsible for providing a slinger/banksman suitably trained in off-loading timber products and advising if trusses are required pre-slung.
- Whilst on site the safety of the delivery driver shall be the responsibility of the Contractor

Method

1. Pasquill will deliver to the nearest hard standing surface.



2. Customer is responsible for providing appropriate mechanical or manual offloading resources.



3. Driver is responsible for the removal of ratchet straps.



4. Driver will remove securing ropes and banding with a cutting device on the responsible persons instruction.



5. If driver has to mount vehicle, he must do so under the authority and supervision of the site manager/contractor with a fall arrest system in place.



6. Customer takes full responsibility for off-loading procedure.

